




Mobile Rig Audio Troubleshooting

If you have no mic input, Invalid ASIO Input, or audio input not activated check the audio hardware setup in Audition for the correct input. **Click Okay to load Adobe Audition.**

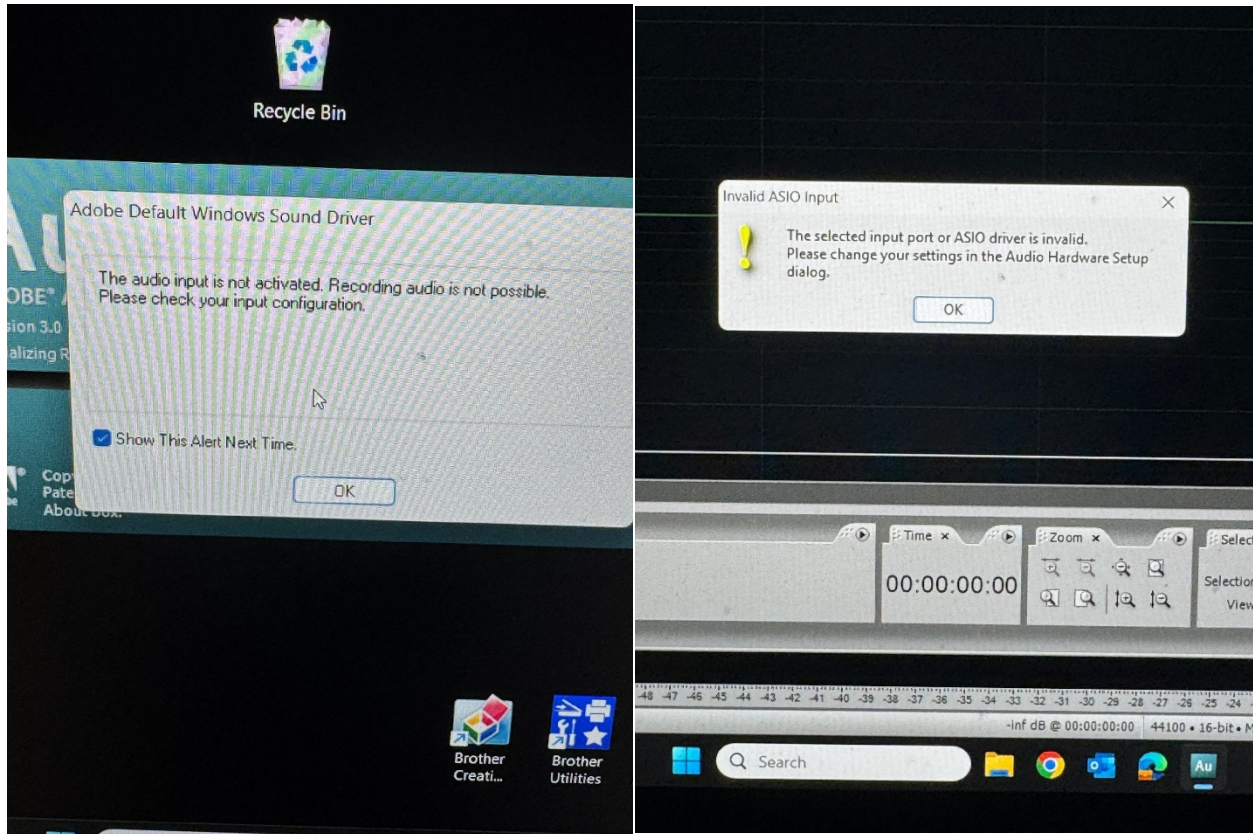

Click **Edit > Audio Hardware Setup**

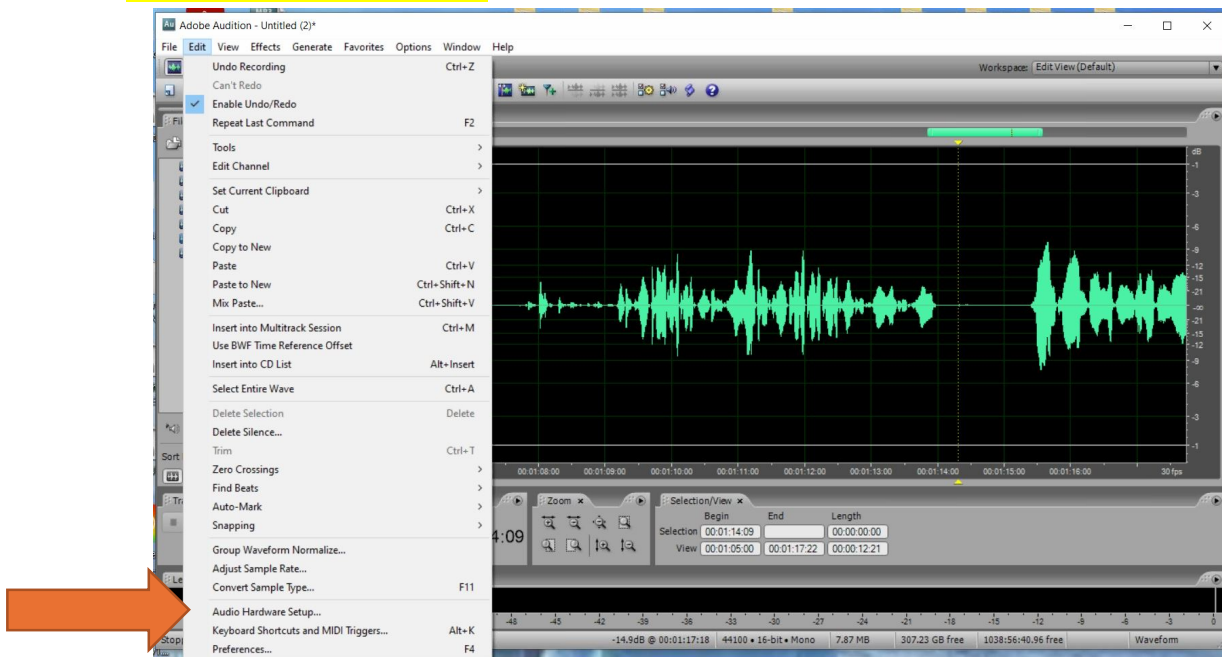

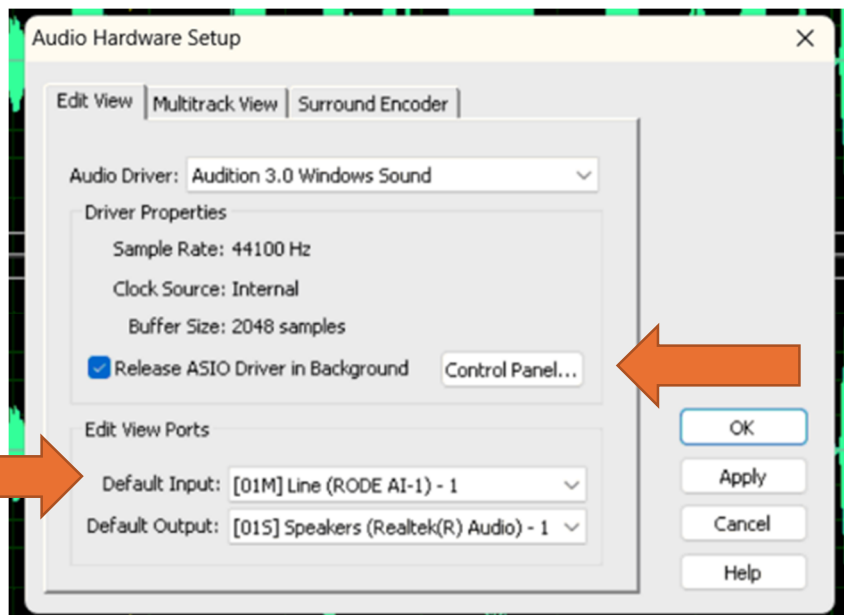

Verify that the Audio Hardware Setup screen appears as above.

Default Input: **Line (RODE AI-1)**

Default Output: **Speakers (Realtek audio)**

If those are **blank or don't look like above** click the **Control Panel** button to fix.

The Control Panel should look like below, make changes to correct and **click OK, then Apply.**

